
Solar Active Venting Equipment

(S.A.V.E. Installation Proceedure)



To install your Solar Panel:


- Place your rolled-up Solar Panel ("SP") near the eave on the south face of your roof.
- Unroll your SP and slide it into a desired position.

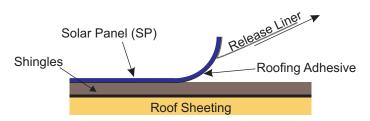



- At the "wire end" of your SP, pull back the release liner and adhere this end onto your roof.
- Pull the remaining release liner off your SP.
- Adhere the remaining area of your SP onto your roof shingles using a soft roller. (avoid stepping on your SP)
- Working under your eave, drill a 3/4" dia. hole through your soffit to gain access to your attic.
- Mount and secure 1/2" electrical conduit from your SP to your soffit hole.
- Run Supply Wires through your electrical conduit into your attic.



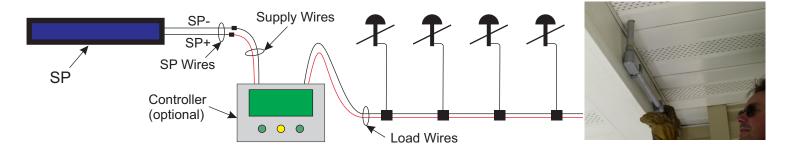

- Pull these Supply Wires through your attic into your garage or work room. (Anywhere you can place a large battery and/or monitor the performance of your SP)
- Connect your SP Wires to your Supply Wires [(SP+) to red] and [(SP-) to white]
- Caulk the conduit where the SP Wires enter to keep water out and caulk around the conduit where it enters your soffit.
- Congratulations, your Solar Panel is now ready for operation.



Solar Active Venting Equipment


(S.A.V.E. Installation Proceedure)



To install your Solar Active Vents:

- Place a mark on your roof for each Solar Active Vent ("SAV") location (approx. every 10 feet).
- Using a radial saw cut a 6" x 6" hole through your roof.
- Maneuver shingles to enable your SAV to fit into each hole.
- Nail the SAV to your roof.
- Position and cut shingles to surround your SAV.
- Caulk the nails and shingles to maintain the integrity of your roof.
- Congratulations your Solar Active Vents are now in place.

To Wire your Solar Panel to your Solar Active Vents:

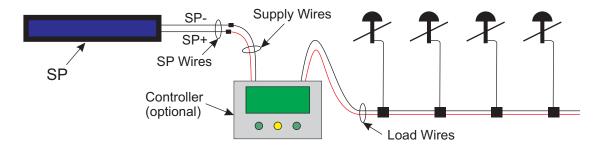

- Run Load Wires from the room where your Supply wires terminate up into your attic.
- While in your attic pull your Load Wires to the farthest SAV.
- Mount strain relief hardware on attic framing near each SAV.
- Tie wrap the Load Wires to each strain relief point (keep some slack in the wires).
- Use connectors provided in the installation kit to connect each SAV to Load Wires (Red Red / White White).
- If you have a Solar Controller connect the SP Wires and the Load Wires to it.
- If you do not have a Solar controller connect the like colored SP Wires to the Load Wires. (Red Red / White White)
- If you have a battery connect it to the Solar Controller.